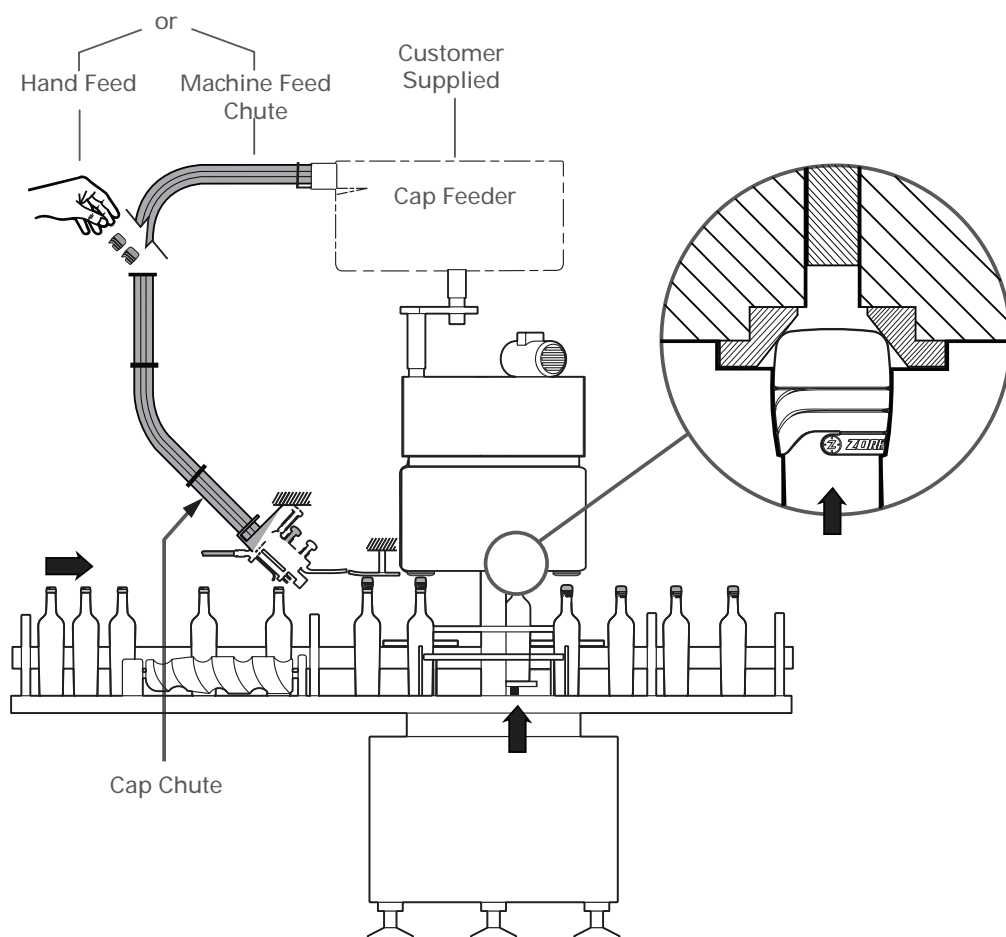


STL

Contact us or your preferred supplier
for detailed installation and setup details.

Not all machines are alike. If the concepts in this schematic do not suit your machine please contact your local supplier or ZORK for a customised solution.

**ZORK**

Winey Road
SA 5069
5635
e zork@zork.com.au
w zork.com.au

STL capping recommendations are subject
to change without notice. Regular updates
are available at www.zork.com.au